



CB-125A
Moulded Case Circuit Breaker

User Instruction



Safety Warning

- ① Installation in any damp, condensed-phase environment with inflammable and explosive gas is forbidden. It is strictly prohibited to operate the product with wet hands.
- ② You are prohibited from touching the conductive part when the product is operating.
- ③ It is strictly prohibited to test the performance of the product by the direct contact of the hot wire against the grounding device or the direct short circuit of the hot wire and the neutral wire.
- ④ When the product is being installed or maintained, the power must be switched off.
- ⑤ The protection features of the product are set by the manufacturer. It is not allowed to open or adjust the circuit breaker at will.
- ⑥ The product must be wired and installed by qualified personnel and be checked regularly.
- ⑦ It is prohibited to let children play with the product or the package.
- ⑧ Prevent foreign objects from falling into the product.
- ⑨ Do not install the product at places where gas media can cause metal corrosion and insulation damage.
- ⑩ Tighten the wiring screws when installing the product to prevent wires from loose or being pulled out.
Select wires strictly according to instructions and connect them to proper power supply and load.
- ⑪ This product does not provide protection for electric shock and electricity unbalance.



This is the general warning sign. It is used to alert the user to potential hazards. All safety messages that follow this sign shall be obeyed to avoid possible harm.

1 Purpose of Use

The CB-125A moulded case circuit breaker complies with IEC/EN 60947-2 standard.

The moulded case circuit breaker is applicable to circuits with frequency of AC 50 Hz, rated AC voltage up to 220/230/240 V(1P) , 380/400/415V(2P/3P/4P) , rated DC voltage up to 60/110V(1P),125V/220 V(2P) ,rated current up to 125 A. It provides overload and short circuit protection, and can also be used for infrequent switching of the circuit under normal circumstances.

Accessories that can be assembled include auxiliary contact AX-X3, alarm contact AL-X3, and shunt release SHT-X3. Overvoltage release OVT-X3, undervoltage release UVT-X3, overvoltage and undervoltage release OUVT-X3.


2 Key Technical Parameters

Table 1 Key Technical Parameters


Rated Working voltage (Ue)	1P: AC 220V or 230V or 240V 1P:DC 60V or 110V	2P, 3P, 4P: AC 400V or 415V 2P:DC125V/220V
Rated limit short-circuit breaking capacity (Icu)	AC:10kA DC:20kA(1P60V, 2P125V) 10kA(1P110V, 2P220V)	
Enclosure protection class	IP20	
Altitude	≤2000m	
Pollution level	Level 3	
Installation category	Class III	

3 Installation


1. Outline and installation dimensions (unit: mm)


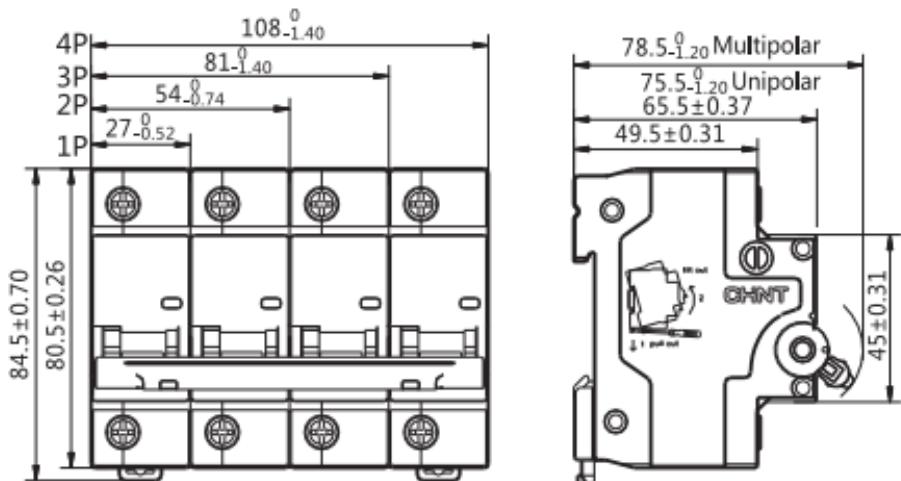


2. On-off indication (unit: mm)

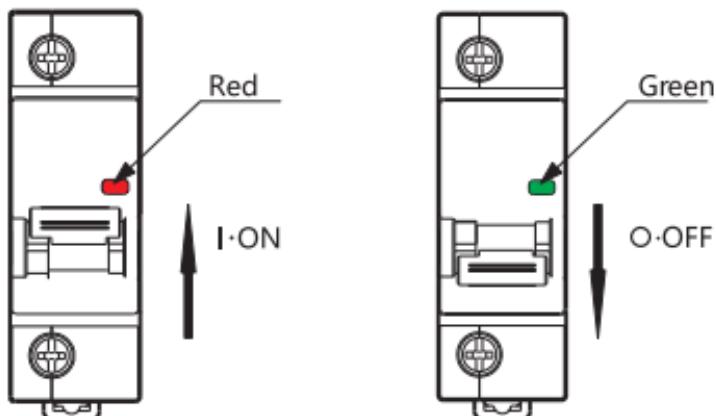

3. Installation (unit: mm)


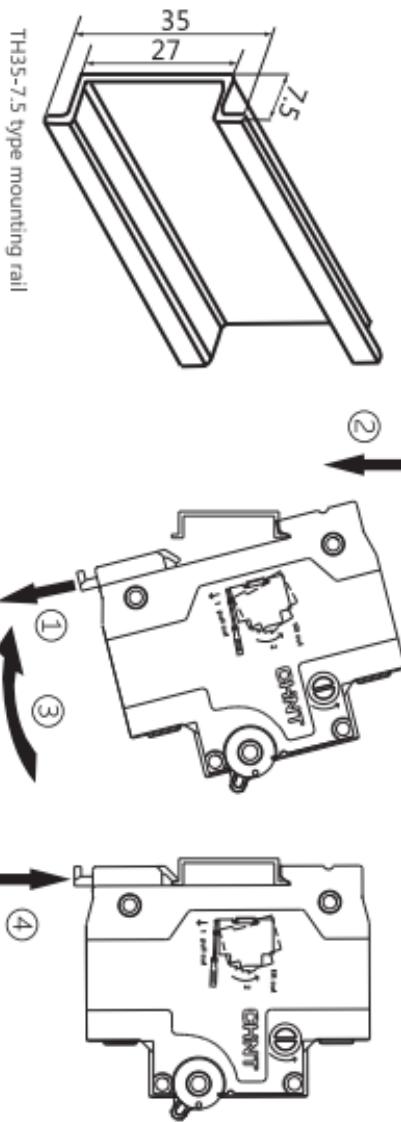


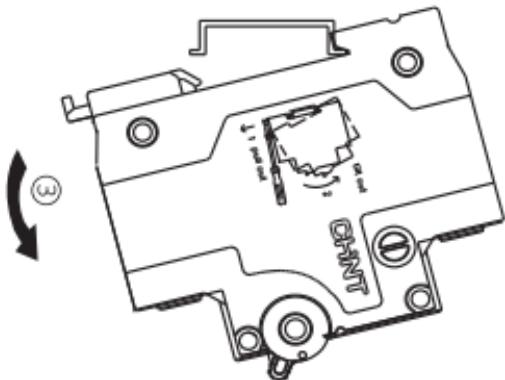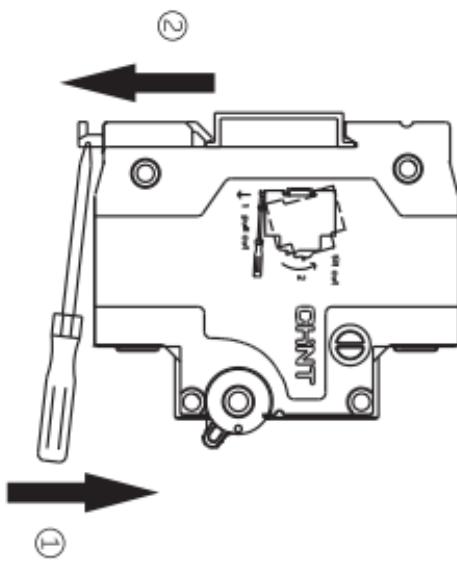

5. Wiring: copper wires only

Table 2 Copper wire cross-sectional area

Rated current In (A)	Copper wire cross-sectional area S (mm ²)
63	16
80	25
100	35
125	50

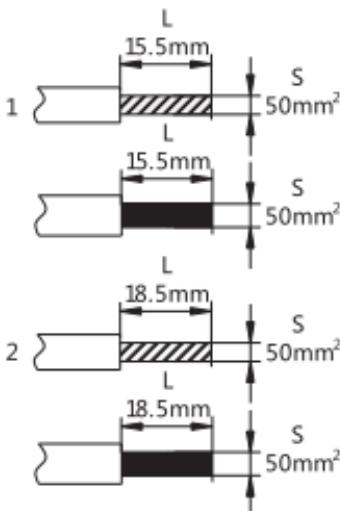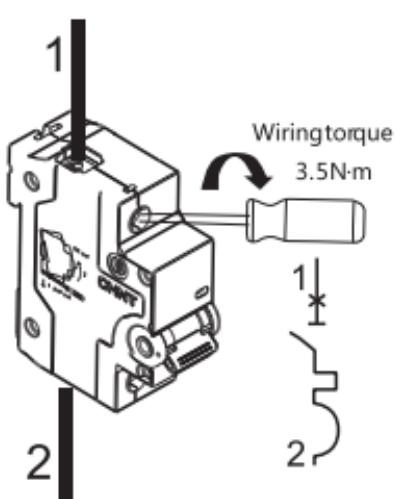

4 Maintenance

1. Check the circuit breaker on a regular basis during operation;
2. After the circuit breaker cuts off the overload or short-circuit current, the fault should be eliminated before closing the circuit breaker.

Table 3 Analysis and troubleshooting of common faults

Symptoms	Cause analysis	Troubleshooting method
Cannot close the circuit breaker by handle	Short circuit at load end	Eliminate the fault
	Fault occurs to the operating mechanism	Replace the product
	The rated current of the circuit breaker does not match the load current	Replace with product of proper specifications
Temperature is too high	The wire is loose or not properly fixed by wiring screws	Tighten the wiring screws
	The cross-sectional area of the selected wire is too small	Replace with wire of proper specifications
The circuit breaker is not disconnected when short circuit occurs	The selected circuit breaker does not match the working conditions of the load	Change with circuit breaker of proper specifications
No power	Too short wire stripping	Re-strip the wire
	The wire is loose or not properly fixed by wiring screws	Tighten the wiring screws

5 Environmental Protection

In order to protect the environment, the product or product parts should be disposed of according to the industrial waste treatment process, or be sent to the recycling station for assortment, dismantling and recycling according to local regulations.



QC PASS

CB-125A

Moulded Case Circuit Breaker
IEC/EN 60947-2

Check 12

Test date:Please see The packing

ZHEJIANG CHINT ELECTRICS CO.,LTD.

CB-125A
Moulded Case Circuit Breaker
User Instruction

Zhejiang Chint Electrics Co., Ltd.

Add: No.1, CHINT Road, CHINT Industrial Zone, North Baixiang,

Yueqing, Zhejiang 325603, P.R.China

E-mail: global-sales@chint.com

Website: <http://en.chint.com>

